


RoadSaver Winterizing Guide

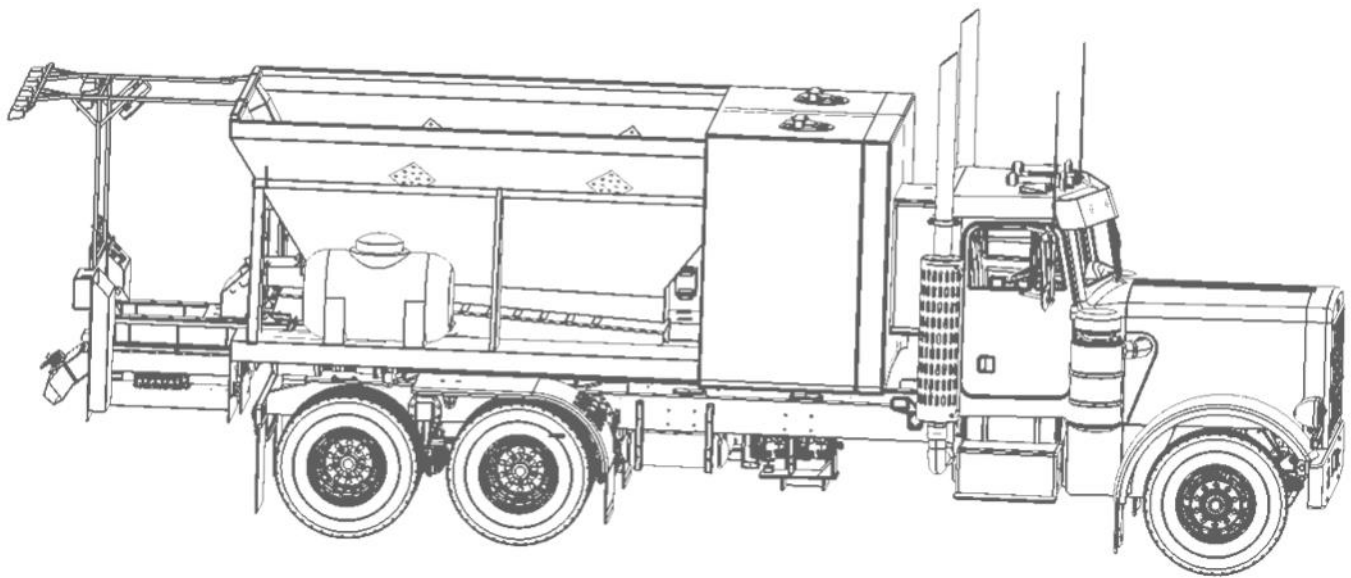

Etnyre International
1333 South Daysville Road
Oregon, IL 61061
815-732-2116
Etnyre.com

Winterizing Guide ROADSAVER II & 3G

LIMITED WARRANTY

Etnyre International warrants products of its manufacture

against defects in material and workmanship for a period of 12 months from the in-service date when operated under normal operating conditions and properly maintained or 18 months from the date of shipment, whichever time is the shortest. Any component part, or parts proving defective within the warranty period will be repaired or replaced, at the option of Etnyre International, F.O.B. the RoadSaver factory, providing such parts are returned to the factory and found to be defective by Etnyre International.

This warranty is not transferable and does not cover damage resulting from other than defects in material or workmanship, or damage caused by unreasonable use, including the failure to provide reasonable and necessary maintenance. In addition, this warranty does not cover general check-ups on electrical equipment, hydraulic equipment, diesel engines, or replacement of non-defective parts (such as filters, fan belts, etc.) that may wear and need to be replaced with reasonable use within the warranty period or which may require replacement in connection with normal maintenance.

This warranty does not apply to any trade accessory, engine, electrical equipment, hydraulic equipment or other component which is separately warranted by another manufacturer and not manufactured by Etnyre International. Etnyre International assumes no responsibility beyond the warranty of the manufacturer of such equipment or accessories.

Etnyre International' liability is limited to the replacement of defective parts, and no allowance shall be made for labor performed, delays or expense incidental to the replacement of the defective parts nor any other special, incidental or consequential damage or injuries. This warranty will not apply to any product that has been repaired or altered outside of Etnyre International' Factory, nor to any product that has been subject to misuse, negligence or accident.

Etnyre International reserves the right to make changes in design and specifications without incurring the obligation to furnish them for machines previously sold or shipped.

All parts returned for warranty consideration shall be shipped to:

Etnyre International

1333 South Daysville Road

Oregon, IL 61061

Winterizing Guide ROADSAVER II & 3G

Winterizing procedures for your RoadSaver machine

- Winterizing or if a machine will be idle for an extended length of time.
- Thoroughly clean the machine and remove all dirt, grime and asphalt.
- Inspect the emulsion tank and clean as necessary.
 - ◊ The tank should be flushed and drain all the lines.
 - ◊ Disconnect the line between the 3 way valve and the pugmill and manually drain.
- Drain all water from the machine to guard against freezing.
 - ◊ Drain water tank, water pump, flush and clean the sprinkler plumbing.
 - ◊ Open one of the water hose bibs, connect an air hose to back-blow water from the system.
 - ◊ Run the system WITHOUT turning on the water pump.
 - ◊ Activate each sprinkler until no water is present.
 - ◊ Empty and clean the inside of the water tank. (Remove all debris.)
 - ◊ Purchase 25 gallons of RV antifreeze and dump into the water tank.
 - ◊ Turn on the water pump and blow through the lines. This can be left this way for the winter.
 - ◊ In the spring drain and flush antifreeze from the lines.
- Assure that the side engine (if present) and trucks engine coolant has the correct amount of antifreeze for expected temperatures.
 - ◊ Ensure the antifreeze is sufficient for the environment.
- Drain liquid additive tank, pump and filter.
 - ◊ Drain all the aluminum sulphate (or other liquid additive) from the system and flush with water.
 - ◊ Add 2 gallons of RV antifreeze, fill the system and leave for the winter.
- Wash aggregate hopper removing all aggregate from the belt.
 - ◊ In extreme winter conditions we recommend placing plywood over the vibrator support area so that ice does not build up on the conveyor.
- Empty and wash out dry additive hopper and auger.
- Inspect all rubber products (Wipers, squeegees, etc.,) and replace as necessary.
- Inspect and grease ALL bearings.
- Check the air pressure in the tires, add as necessary.

**Winterizing Guide
ROADSAVER II & 3G**

PARTS ORDER FORM

BILL TO:
Company: _____
Name: _____
Address: _____

SHIP TO:
Company: _____
Name: _____
Address: _____

Phone: _____
FAX: _____

Phone: _____
FAX: _____

Page #	QTY	Ref #	Description

Preferred Shipping Method:

Send Order To:
Etnyre International
3650 Sabin Brown Road
Wickenburg, AZ 85390
USA
Phone: (888) 897-0575

